

ELMDENE


Protecting People & Property

Elmdene International Ltd
3 Keel Close, Interchange Park,
Portsmouth, Hampshire, PO3 5QD, UK

Tel: +44(0)23 9269 6638
Fax: +44(0)23 9266 0483
Web: www.elmdene.co.uk

SABRE SIREN DUMMY

Assembly Instructions for SBR-COV-x With SBR-DUM-BRKT

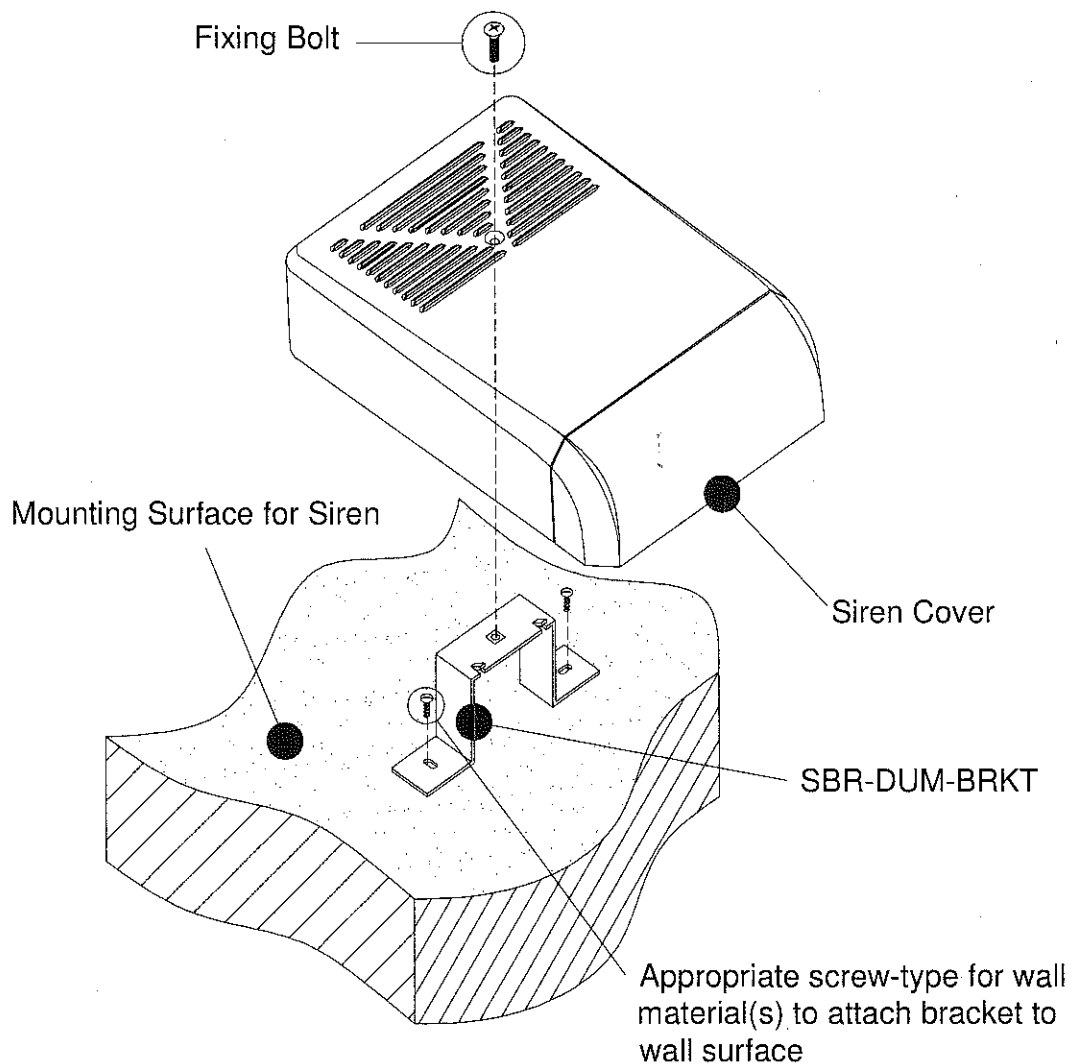

Installation Tips: It is recommended that a pilot hole is drilled prior to any installation to ensure that the bracket is fixed perfectly level and securely. If fixing to a brick or plaster/rendered wall, use appropriate wall plugs.

Instructions:

1. Screw the bracket to the mounting surface with appropriate fixing screws intended for the construction material(s) of the mounting surface. Ensure correct orientation of the bracket, with the louvre locating tabs on the bottom edge.
2. Position the cover over the bracket; ensure the hole in the cover is aligned with the nut in the bracket.
3. Using the bolt provided, insert and tighten firmly. There should be no rotational movement from the siren cover once fixed in place - it should sit flush against the wall surface. If necessary the louvre locating tabs may be bent up further to improve engagement with the corresponding cover louvre.

↓ MOUNT BRACKET THIS WAY UP ↓

